


Repair Instructions for String Beds

Splice in short pieces with knots that are placed to be under the bed. (If two strings are broken you should stagger the knots)

Use Bowline Knots

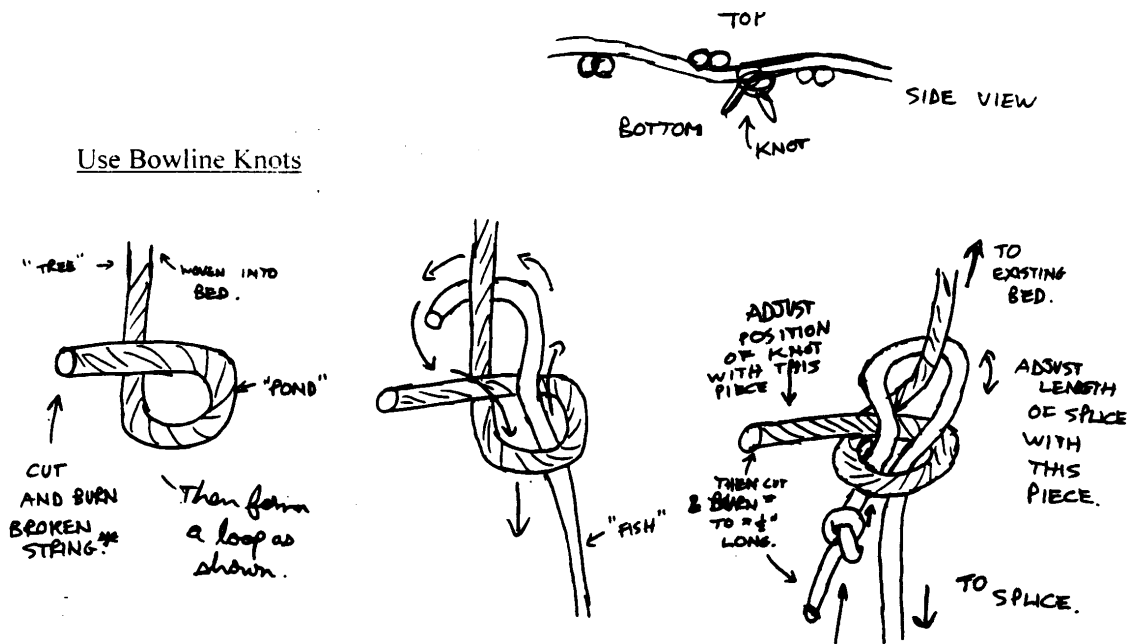

Be careful on Burning not to set the bed on fire!

Take splice piece ("fish") and tie knot.

Tie a half hitch up tight when knot is finished to stop slippage.

"Fish jumps out of the pond, around the tree and back into the pond"

When tying the 2nd knot of the splice, take off a few springs so that the splice can be as tight, or a bit tighter than the original piece. (Knots may be glued using white wood glue, to ensure against slippage).

Use a paper clip, bent to present a small hook, to fish splice through the bed.